

Kids' Sing-Along Tape Recorder

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Kids' Sing-Along Cassette Recorder is a portable recorder that lets you sing along with pre-recorded cassettes, listen to your favorite tapes, make recording, or amplify your voice. The Kids' Sing-Along Cassette Recorder is recommended for children ages 4 and up.

Built-in Microphone — lets you sing along with a pre-recorded cassette tape or make recordings of your own.

Record/Play — lets you make and play back recordings.

Auto-Stop — stops the recorder when a tape reaches its ends.

Built-In Speaker — lets you listen to your favorite tapes and recordings.

CONNECTING POWER

Your recorder requires four C batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.

- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

1. Press the two tabs on the battery compartment cover down and lift the cover up to remove it.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked outside the compartment.
3. Replace the cover.

When the sound becomes weak or distorted, the tape speed slows, or the recorder stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the recorder for about a month, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.



RadioShack®

www.radioshack.com™

© 2000 Tandy Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by Tandy Corporation.

LOADING A TAPE

1. Press **STOP/EJECT** to open the cassette compartment.
2. Slide the cassette tape into the compartment with the side you want to play facing out and the open edge facing up.
3. Close the compartment.

PLAYING A CASSETTE TAPE AND SINGING ALONG

You can mix your voice with any tape, but karaoke tapes work better.

1. Press **PLAY**. The tape begins to play.
2. Adjust the volume to the desired sound level.

Note: To fast forward or rewind the tape, first press **STOP/EJECT** to stop play, then press **FAST-F** or **REW**. Press **STOP/EJECT** then **PLAY** to resume play.

3. To sing along with a tape, slide the microphone out from its holder and set **ON/OFF** to **ON**.

Sing into the microphone. Your voice is mixed with the tape and comes out from the speaker.

4. When the tape reaches the end, it automatically stops. To stop the tape sooner, press **STOP/EJECT**. Press **STOP/EJECT** to open the compartment and remove the tape.

5. To play the tape's other side, remove and reinsert it so the other side plays.

USING THE PLAYER AS AN AMPLIFIER

1. Slide the microphone out from its holder and set **ON/OFF** to **ON**.
2. With no cassette tape in the compartment, press **PLAY**.
3. Speak into the microphone. Adjust the volume to the desired level. Your voice is amplified through the recorder's built-in speaker.
4. When you finish, press **STOP/EJECT**. Slide **ON/OFF** to **OFF** and place the microphone back into its holder.

RECORDING

Follow these steps to make a recording with the microphone.

1. Load a blank tape (or one you want to record over) into the cassette compartment.
2. Set the microphone's **ON/OFF** to **ON**, then press **PLAY** and **REC**. Both **PLAY** and **REC** lock down. Sing or speak into the microphone.

Or, to record a song on the radio (for example), put the microphone near a radio's speaker.

3. To stop recording, press **STOP/EJECT**. When you finish, place the microphone back into its holder.

TAPE TIPS

Erasing Tapes

To record over a cassette tape, simply record as usual. The tape recorder records over the previous recording.

You can quickly erase both sides of a cassette tape using a bulk tape eraser.

Preventing Accidental Erasure

Cassette tapes have two erase-protection tabs — one for each side. When a tab is in place, you can record on that side.

To prevent accidental erasure of a tape recording, use a screwdriver to remove one or both of the cassette tape's erase protection tabs. This prevents **RECORD** from being pressed.

If you later decide to record on a tape side after you have removed the erase-protection tab, place a piece of strong plastic tape over that side's erase-protection hole. Be sure you cover only the hole originally covered by the erase-protection tab.

Caution: Removing the erase-protection tabs does not prevent a bulk eraser from erasing a cassette tape.

Restoring Tape Tension and Sound Quality

After you play a cassette tape several times, the tape might become tightly wound on the reels. This can cause playback sound quality to deteriorate.

To restore the sound quality, fast-forward the tape from the beginning to the end of one side, then completely rewind it. Then loosen the tape reels by gently tapping each side of the cassette's outer shell on a flat surface.

Caution: Be careful not to damage the cassette when tapping it. Do not touch the exposed tape or allow any sharp objects near the cassette.

Cleaning the Tape-Handling Parts

Dirt, dust or particles of the tape's coating can accumulate on the tape heads and other parts that the tape touches. This can greatly reduce the performance of the system. After every 20 hours of tape player operation, follow these steps to clean the tape-handling parts.

1. Remove the batteries.
2. Open the cassette compartment door and press **PLAY** to expose the tape-handling parts.
3. Use a cotton swab dipped in tape head cleaning solution or denatured alcohol to gently clean the record/playback head, pinch roller, capstan and tape guides.
4. Press **STOP/EJECT** to release the tape-handling parts. Then close the cassette compartment cover and reconnect power.

Note: For easier cleaning, you can use a cassette cleaner kit, which includes a special cleaning cassette. Your local RadioShack store carries a full line of cassette deck cleaning supplies.

CARE

To enjoy your RadioShack Kids' Sing-Along Tape Recorder for a long time:

- Keep the recorder dry. If it gets wet, wipe it dry immediately.
- Use and store the recorder only in normal temperature environments.
- Handle the recorder gently and carefully. Do not drop it.
- Keep the recorder away from dust and dirt.
- Wipe the recorder with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the recorder's internal components can cause a malfunction and might invalidate its warranty. If your recorder is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Tape system	1 Channel, 2 Tracks
Tape Speed	1 ⁷ / ₈ ips
Wow and Flutter	0.35%
Signal-to-Noise Ratio	40 dB
Frequency Response	250-6.3kHz (±6 dB)
Power Requirements	6V DC (four C batteries)
Dimensions	8 ³ / ₈ × 9 ¹ / ₁₆ × 3 ¹⁵ / ₁₆ in (213 × 230 × 100 mm)

Weight 31 oz
(878.8 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations,
200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

14-872
05A00
Printed in China